 
 


PLEASE NOTE

 
1. The foils are sensitive to pressure. Do not press them or place undue direct pressure on them.

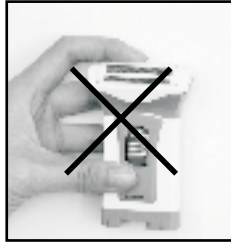


2. Do not attempt to remove the foil casing with a screw driver. Pull gently to remove the foil casing from the hair remover.

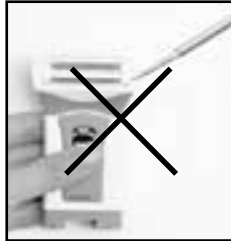

3. Never charge the hair remover near a heater, in a draft or where there is moisture present or in direct sunlight.

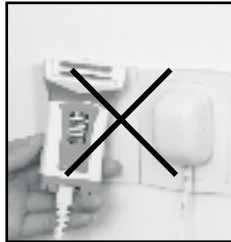

 WARNING
NEVER USE THE HAIR REMOVER
IN A WET ENVIRONMENT
OR THE BATHROOM WHILE
CHARGING!

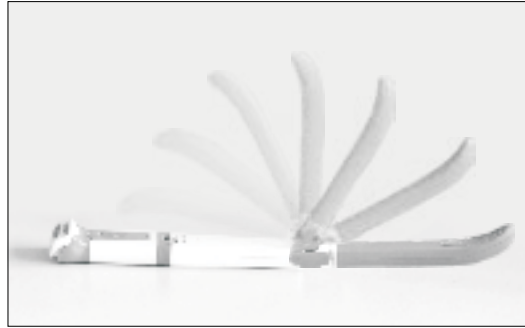

The handle is 180 degree foldable so you can adjust the handle to your desired angle. With this foldable handle, it is easier to remove hair, without bending. Easy & comfortable to use.

*Silk
EASE*

**CORDLESS
RECHARGEABLE
WET/DRY HAIR
REMOVER WITH
HANDLE**



INSTRUCTIONS
Keep for Future Reference

Charging

SAFETY INSTRUCTIONS Read all instructions before use

 
- As with all electrical devices, practice caution while using this hair remover.
- To avoid an electric shock, do not use or place the hair remover close to water while it is plugged in and charging.
- If you have been using this hair remover in a shower or a bath, ensure that it has been rinsed properly and returned to a safe storage area. Ensure that the hair remover is not connected to charger while using in the bathroom or in a wet environment.
- Keep the electrical cord away from heating devices or heated surfaces.
- Never try to operate this hair remover if it has fallen onto a hard surface or into water while being charged.
- Do not attempt to use the hair remover if the cord or plug has been damaged.
- This hair remover is equipped with a rechargeable battery. Keep the hair remover stored in a cool dry place. Do not expose the hair remover to extreme temperatures e.g. in a car during summer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Usage

CHARGING

Prior to using hair remover for the first time, charge it as follows.

- Ensure that your hands are dry.
- Connect the hair remover and power cable with a suitable 2-pin adaptor to a wall socket.
- Always ensure that the hair remover is in the OFF position and that the power is switched OFF at the wall socket BEFORE making the connection.
- To start charging, switch the power ON at the wall socket.
- Charge the hair remover for 5-7 hours.
- The hair remover is now fully charged and can be used for 5-7 days, depending on how long you use the hair remover on each occasion.
- Do not charge the hair remover for longer than the prescribed duration as this may prematurely decrease the charge-holding capacity of the hair remover or even damage the hair remover.

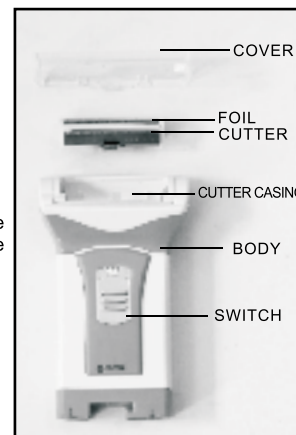

HAIR REMOVER

If you have never used an electric hair remover before, your skin will need time to adjust to the hair remover.

Maintenance

Initially, your skin may even become irritated and you may not achieve as close a hair removal as what you would expect. This is normal and with time, it will improve. Give yourself at least 2 weeks to become accustomed to the hair remover; when hair removing with wet skin, ensure that the power cord has been unplugged before handling.

CLEANING THE HAIR REMOVER

- Fine hair cuttings collect in the hair remover foils during use. For optimum performance, clean these parts after each use.
- Because this hair remover is suited for wet and dry use, you may simply rinse the hair remover foils under running water.
- When rinsing under running water, ALWAYS ENSURE that the hair remover power adaptor cable is disconnected from the hair remover and the hair remover is OFF.
- To clean the cutters, remove the cutter casing by pulling the casing off. Simply brush all hair away, then replace casing securely.
- Clean the hair remover after each use.
- When you have finished hair removing, turn the hair remover OFF and replace the protective cover.

